



# CMOS List

**Note:** Click the driver or software name to download file.

Series	Model	VID&PID		Driver	Software
TCA	TCA-1.3BWHS	0547	E014	<a href="#">TCA-1.3BWHS driver</a>	Windows: <a href="#">TSView6</a> or <a href="#">TSView7</a>
	TCA-1.3CHS	0547	E013	<a href="#">TCA-1.3CHS driver</a>	
	TCA-1.31C	0547	6131	<a href="#">TCA-1.31C driver</a>	
	TCA-2.0C	04B4	2121	<a href="#">TCA-2.0C driver</a>	
	TCA-3.0C	0547	4D33	<a href="#">TCA-3.0C driver</a>	
	TCA-5.0BW	0547	4D35	<a href="#">TCA-5.0BW driver</a>	
	TCA-5.0C	0547	4D35	<a href="#">TCA-5.0C driver</a>	
	TCA-8.0C	0547	4D88	<a href="#">TCA-8.0C driver</a>	
	TCA-9.0C	0547	5911	<a href="#">TCA-9.0C driver</a>	
	TCA-10.0C	0547	92A0	<a href="#">TCA-10.0C driver</a>	
	TCA-10.0N	0547	C003	<a href="#">TCA-10.0N driver</a>	
	TCC-1.4CHICE-N	0547	45B1	<a href="#">TCC-1.4CHICE-N driver</a>	
	TCC-1.4HICE	04B4	3002	<a href="#">TCC-1.4HICE driver</a>	
	TCC-1.4HICE-N	0547	45B1	<a href="#">TCC-1.4HICE-N driver</a>	
	TCC-1.4LICE	04B4	3001	<a href="#">TCC-1.4LICE driver</a>	
	TCC-1.4LICE-N	0547	30A3	<a href="#">TCC-1.4LICE-N driver</a>	
	TCC-3.3ICE-N	0547	9310	<a href="#">TCC-3.3ICE-N driver</a>	
	TCC-6.1ICE	0547	D610	<a href="#">TCC-6.1ICE driver</a>	
TCC-8.0C	0547	A801	<a href="#">TCC-8.0C driver</a>		
Beta	IS130BW	0547	C00B	<a href="#">Beta-Camera-Driver</a>	Windows: <a href="#">ISCapture 3.6.8</a>
	IS130	0547	C008		
	IS300	0547	C007		
	IS500	0547	C004		
	IS1000	0547	C003		
	IMX122	0547	C00C		
	Discovery C15	0547	C005		
	Discovery C30	0547	C009		
	Discovery M15	0547	C00A		
	TCA-5.0BWLE	0547	C006		
	TCC-1.4CHICE	0547	D009		
	TCC-1.4HICE	0547	D006		
	TCC-1.4LICE	0547	D004		
	TCC-5.0	0547	D001		
	TCC-6.1ICE	0547	D002		




H (CMOS)	ISH130BW	0547	A00B	<a href="#">Camera Driver H Series v8.7</a>	Windows: <a href="#">Tcapture 4.3</a> <a href="#">Tcapture 5.1.1</a>
		5453	A80B		
	ISH130	0547	A008		
		5453	A808		
	ISH300	0547	A007		
		5453	A807		
	ISH500BW	0547	A006		
		5453	A806		
	ISH500	0547	A004		
		5453	A804		
	ISH1000	0547	A003		
		5453	A803		
	Discovery MH15	0547	A00A		
		5453	A00A		
5453		A00B			
Discovery CH15	0547	A005			
	5453	A805			
Discovery CH30	0547	A009			
	5453	A809			
Digi Retina 16	5453	2A01			
H (CCD)	TCH-1.4L	5453	8004	<a href="#">Camera Driver H Series V8.8</a>	Mac: <a href="#">ISListen</a>
	TCH-1.4	5453	8006		
	TCH-1.4CL	5453	8804		
	TCH-1.4C	5453	8809		
	TCH-1.4ICE	5453	8406		
		0547	E006		
	TCH-1.4CICE	5453	8C09		
		0547	E009		
	TCH-1.4LICE	5453	8404		
		0547	E004		
	TCH-1.4CLICE	5453	8C04		
		0547	E008		
	TCH-5.0ICE	5453	8C01		
		0547	E001		
	TCH-6.1ICE	0547	E002		
	H-674ICE	0547	E00A		
	H-687ICE	0547	E00B		
	H-674CICE	0547	E80A		
H-694ICE	0547	E00C			
H-694CICE	0547	E80C			
H-694C	5453	8C0C			
H-674ICE	5453	840A			

	H-694ICE	5453	840C		
--	----------	------	------	--	--


**NOTE:**

**Camera model can be confirmed by VID&PID**

- 1) Open “Device Manager”, and find the camera device;
- 2) Select “Properties” in Right-click menu;

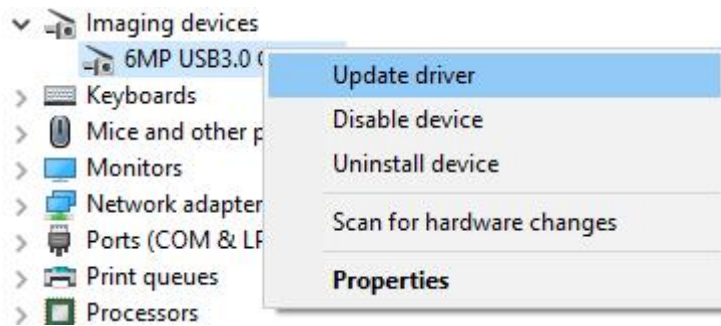

- 3) Switch to “Details” window, and select “Hardware IDs”, then we can find camera’s VID&PID value as below shows.

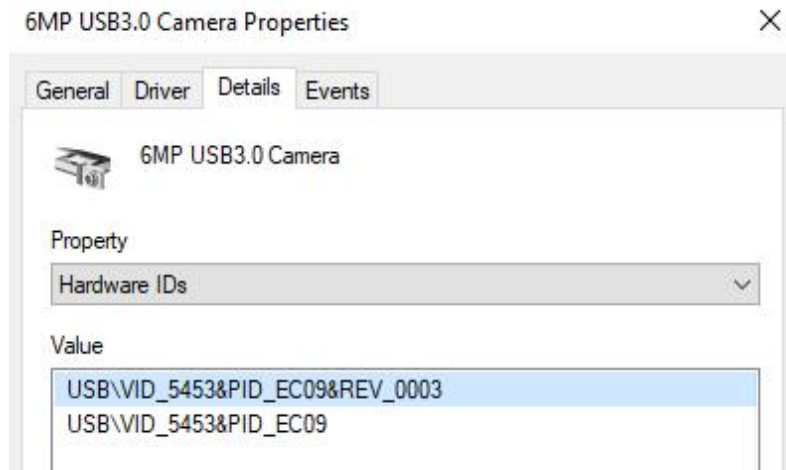

**Note:**

If the correct driver and software have been installed, but the camera still doesn't work properly, please contact us (TEL: 400-075-8880, Email: [service@tucsen.com](mailto:service@tucsen.com)), and attach the camera's SN and VID&PID information.